

KONKA


Please thoroughly read this user manual before use.

Refrigerator User's Manual

Model KRF-202W & KRF-202SS

Instruction Guide

General Description

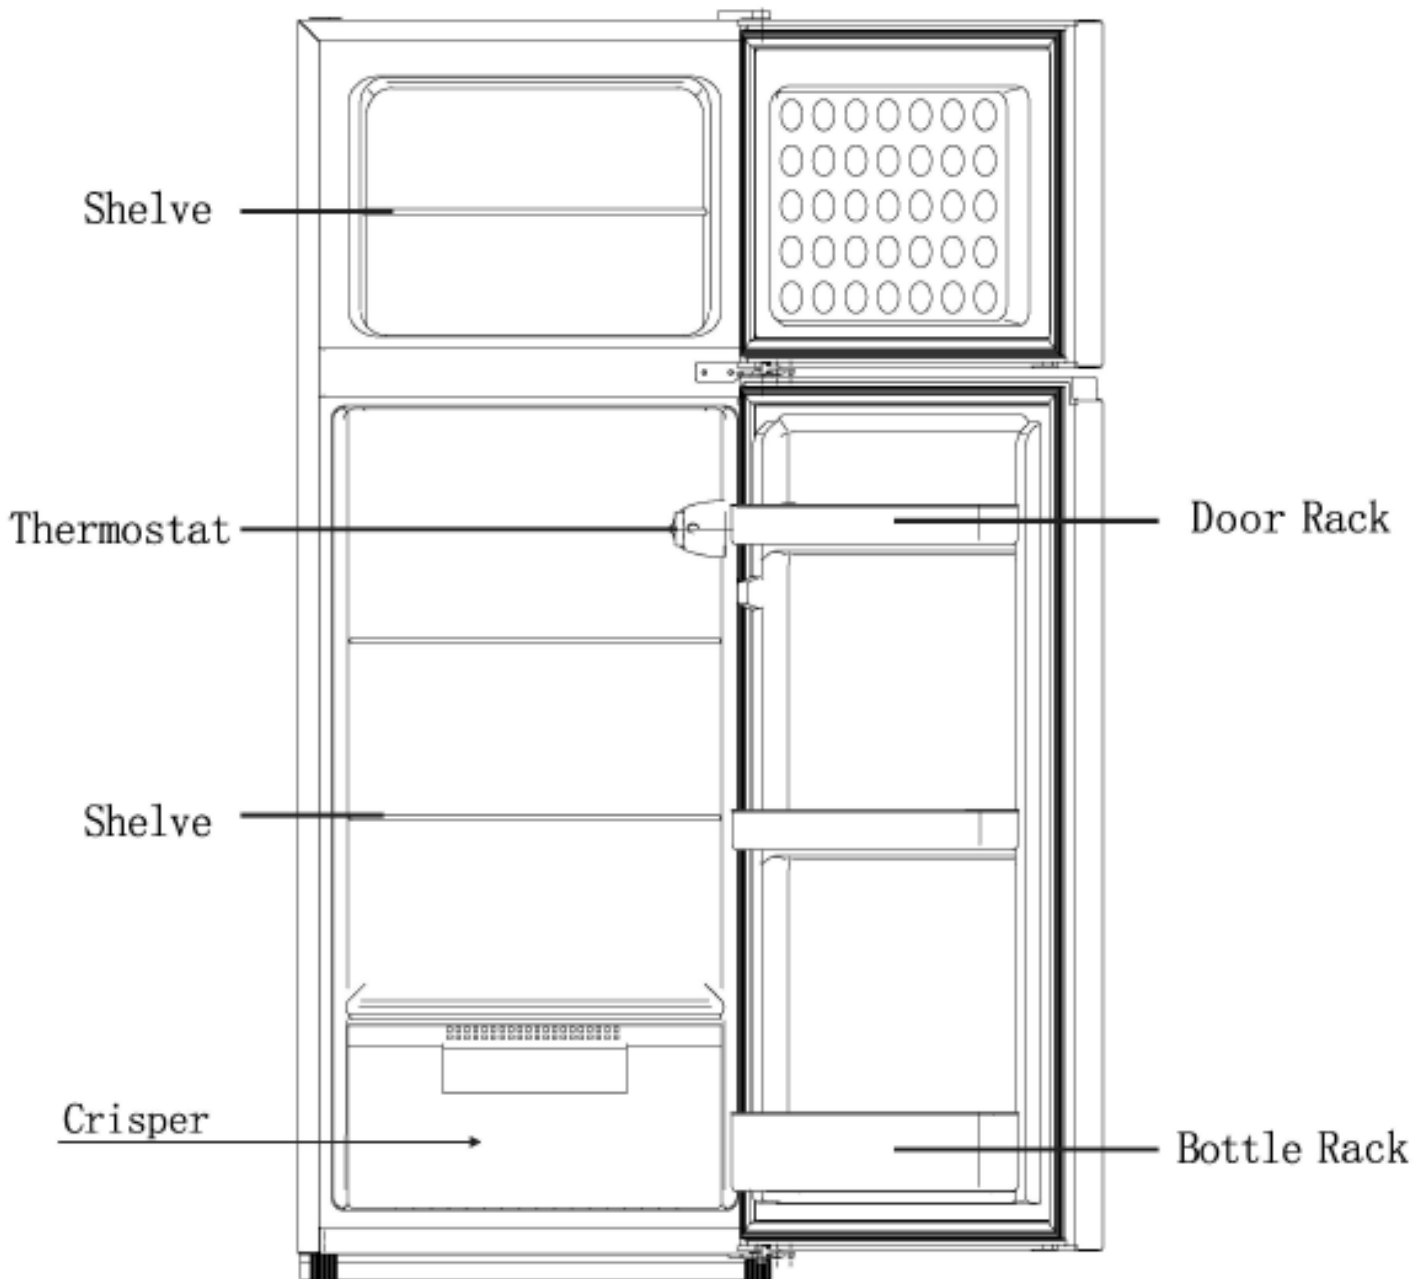

PLEASE NOTE: This image is for reference purposes only; please refer to your actual product.

Dear Customer,

Thank you for purchasing this refrigerator. To achieve optimal performance from your new appliance, please take a moment to read the simple instructions provided in this booklet.

Ensure that all packing materials are disposed of in accordance with current environmental regulations.

For the disposal of refrigerator equipment, please contact your local waste disposal department for guidance on safe disposal.

This appliance should only be used for its intended purpose.

CAUTION:

This appliance is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, unless they are supervised or instructed in the use of the appliance by a responsible person. Children should be supervised to ensure they do not play with the appliance.

Product Technology Parameter

MODEL	KRF-202W	KRF-202SS
Climate Type	T	T
Protection Class	I	I
Rated Voltage/Frequency	220-240V~ /50Hz	220-240V~ /50Hz
Rated Current	0.5A	0.5A
Lamp Rated Power(W)	10W	10W
CEC	266kWh/a	266kWh/a
Total Volume	201L	201L
Fresh Food Compartment Volume	159L	159L
Freezer Compartment Volume	42L	42L
Refrigerant, Mass	R600a ,37g	R600a ,37g
Foaming Agent	Cyclopentane	Cyclopentane
Net Weight	41 kg	41 kg
Airborne Acoustical Noise Emissions	41dB(A)	41dB(A)
Overall Dimension (WxDxH)	544x530x1445 (mm)	544x530x1445 (mm)

WARNING

- Keep ventilation openings in the appliance enclosure or built-in structure clear of obstructions.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance unless they are recommended by the manufacturer.
- Unplug the appliance after use and before performing any user maintenance.
- This appliance is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, unless supervised or instructed by a responsible person.
- Children should be supervised to ensure they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Dispose of the refrigerator according to local regulations due to its use of flammable blowing gas and refrigerant.
- Do not store explosive substances such as aerosol cans with flammable propellant in this appliance. This appliance is intended for household and similar applications.
- **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING:** Do not place multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- The foaming agent used in the refrigerator-freezer is flammable. Scrapping and recycling of the refrigerator-freezer should be handled by specialized companies to prevent environmental hazards or other dangers.

- Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your refrigerator.
- When moving the refrigerator, do not tilt it beyond 45° from the upright position.
- After removing all packaging materials, clean the inside of your refrigerator before using it.
- For compression-type appliances that use flammable refrigerants, follow the installation, handling, and servicing instructions (IEC 60335-2-24).
- This appliance can be used by children aged 8 years and above, and by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction regarding safe use of the appliance and understand the hazards involved.
- Children should not play with the appliance.
- Cleaning and user maintenance should not be performed by children without supervision.



**Warning; Risk of fire /
flammable materials**

Correct Disposal of This Product



This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

SPACE REQUIREMENTS

WARNING: Keep flammable materials and vapors, such as gasoline, away from the refrigerator. Failure to do so can result in death, explosion, fire, or burns.

- To ensure proper ventilation for your refrigerator, allow for 200mm of space on each side between the refrigerator and the walls, 100mm of space between the back of the refrigerator and the wall, and 300mm of space between the countertop and the roof or ceiling.
- If you are installing your refrigerator next to a fixed wall, leave sufficient space on the hinge side to allow the door to swing open.
- Never install your refrigerator near a heat source or in direct sunlight.

ELECTRICAL REQUIREMENTS

WARNING:

- DO NOT REMOVE THE GROUND PRONG.
- DO NOT USE AN ADAPTOR.
- DO NOT USE AN EXTENSION CORD.

Failure to follow these instructions can result in death, fire, or electrical shock.

Before moving your refrigerator to its final location, ensure you have the proper electrical connection.

...CONTINUED ON PAGE 7

INSTALLING YOUR REFRIGERATOR

UNPACKING YOUR REFRIGERATOR

WARNING: Use two or more people to move the refrigerator. Failure to do so can result in back or other injuries.

- Remove tape and any labels from your refrigerator before using it (except for the rating label).
- To remove any remaining tape or glue, rub the area briskly with your thumb. Tape or glue residue can also be easily removed by rubbing a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.

Recommended Earthing Method

- AC 220-240 V, 50Hz only.
- A 10 Amp fuse and properly earthed electrical supply are required.
- It is recommended to use a separate circuit serving only this appliance.
- Use a receptacle that cannot be turned off with a switch or pull chain.
- Do not use an extension cord.

NOTE: Before performing any type of installation, cleaning, or removing a light bulb, disconnect the refrigerator from the electrical source. When finished, connect the refrigerator to the electrical source and reset the control to the desired setting.

LEVELING

If the refrigerator is not leveled during installation, the doors may not close or seal properly, leading to cooling, frost, or moisture problems. It is crucial for the refrigerator to be level to function correctly. To level your refrigerator, turn the leveling leg clockwise to raise that side of the refrigerator, or counterclockwise to lower that side.

****NOTE:**** Having someone push against the top of the refrigerator can take some weight off the leveling leg, making it easier to adjust.

USING YOUR REFRIGERATOR

To ensure optimal performance from your refrigerator, it's essential to operate it correctly.

Setting the Thermostat Controls

- The controls for the refrigerator and freezer are located at the top shelf of the refrigerating compartment.
- When installing your refrigerator, set the Thermostat knob at 5 initially.
- Allow your refrigerator to cool down completely before adding food. It's recommended to wait 24 hours before adding food.
- The thermostat knob regulates the temperature. A higher number setting means the compressor will run longer to maintain a colder temperature.

Changing the Light Bulbs

- Unplug the refrigerator or disconnect it from the power supply before removing the bulb.
- Replace the bulb with a 1.5 or 10-watt appliance bulb. Ensure the replacement bulb matches the size and shape of the original.
- Plug in the refrigerator or reconnect it to the power supply after replacing the bulb.

Power Interruptions

- If there's a short power outage, keep both doors closed to preserve the coldness of the food.
- For longer power outages, remove food from the freezer and store it in a frozen food locker.

...CONTINUED ON PAGE 9

Fresh Food Storage

- Wrap or store food in airtight and moisture-proof material to prevent odor and taste transfer within the refrigerator.
- Fruit: Wash, dry, and store in plastic bags or crisper.
- Leafy Vegetables: Remove wrapping, trim bruised areas, wash in cold water, and drain. Store in plastic bags or containers in the crisper.
- Fish: Use fresh fish on the day of purchase.
- Meat: Store in original wrapping if airtight and moisture-proof. Re-wrap if necessary.
- Leftovers: Cover with plastic wrap, aluminum foil, or use airtight plastic containers.

Frozen Food Storage

The freezer compartment is designed for storing frozen food and for home freezing purposes.

Successful freezing relies on proper packaging. When sealing the package, ensure no air or moisture enters or escapes. Otherwise, you risk food odor and taste transfer within the refrigerator, as well as drying out frozen food.

NOTE: Avoid placing bottled food or drinks in the freezer compartment.

For optimal performance:

- Leave sufficient space in both the freezer and refrigerator compartments for air circulation around the packages.
- Ensure there's enough room at the front for the door to close tightly.

...CONTINUED ON PAGE 10

Defrosting

Refrigerator Compartment:

- The defrosting process is automatic, regulated by the thermostat knob. Melted frost flows into the drip tray and evaporates automatically.

Freezer Compartment:

- Defrosting the freezer compartment is a manual process.
- Leave the freezer door open.
- Remove all food and shelves or transfer them to the refrigerating compartment.
- Clean and wipe away the melted frost with a cloth.
- After defrosting, return the thermostat knob to its original position.

NOTE: Avoid using sharp objects to remove frost or separate frozen food to prevent damage to the freezer compartment wall.

MAINTAINING YOUR REFRIGERATOR

To maintain freshness and prevent odours, it's essential to clean your refrigerator at least once a month and promptly wipe up any spills.

To clean your refrigerator:

- Unplug it.
- Remove all movable parts from inside, such as shelves and crisper.
- Use a clean sponge or soft cloth with a mild detergent in warm water. Avoid abrasive or harsh cleaners.
- Hand wash, rinse, and dry all surfaces thoroughly.
- Avoid using cleaning waxes, concentrated detergents, bleaches, or cleaners containing petroleum on plastics and rubber parts.
- Never use paper towels, window sprays, scouring cleansers, or flammable fluids on plastic parts, as these can scratch or damage the material.

Following these steps will help ensure effective and safe cleaning of your refrigerator.

TROUBLESHOOTING

In case of malfunction, you can easily solve many common problems:

Refrigerator Will Not Operate

- Check if the power supply cord is unplugged.
- Ensure the thermostat knob is not set to the OFF position.

Light Does Not Work

- Verify if the power supply cord is unplugged.
- Check if a household fuse or circuit breaker has tripped.
- Ensure the light bulb is securely screwed into the socket.
- Replace the light bulb if it has burned out.

Food in the Refrigerator Compartment Freezing

- Check if the thermostat knob is set too cold.
- Ensure food stored does not touch the refrigerant power of the refrigerator back wall.

Food in the Refrigerator Compartment is Not Cold

- Ensure the air vents in the compartment are not blocked, as this prevents the movement of cold air.
- Check if the door(s) are being opened too often or not closing properly.
- If a large amount of food has been recently added to the refrigerator or freezer compartment.
- Adjust the thermostat knob to a higher setting if it is set too low.

Melted Frost Leaks over Compartment Inside or on Floor

- Check if the drain-off mouth entrance is blocked.
- Ensure the evaporator pan is in place.

Unusual Noise from the Refrigerator

- Ensure the refrigerator is leveled on the floor.
- Check if the body of the refrigerator is touching the wall.

- Verify if the drip tray is placed properly.

Interior Moisture Build-up

- Ensure the air vents in the refrigerator are not blocked.
- Check if the door is opened frequently.
- Assess if the room has high humidity levels.
- Verify if food is packaged correctly.
- Ensure the control is set correctly for the surrounding conditions.

Doors Will Not Close Completely

- Check if food packages are blocking the door from closing.
- Ensure the shelves are in the correct position.
- Clean the gaskets if they are dirty.
- Make sure the refrigerator is properly leveled.

WARNING

- The appliance is not intended for use by young children or infirm persons without supervision.
- Supervise young children to ensure they do not play with the appliance.

REQUESTING ASSISTANCE OR SERVICE

If the problem persists and is not resolved by the troubleshooting steps, please contact the dealer or an authorized service company for assistance.

How to Dispose of the Packing Material

The packing material is recyclable. Follow these recommended procedures:

- Dispose of paper, card, and carton in the respective containers.
- Dispose of plastics in the respective containers.
- If recycling bins are unavailable in your area, you can place this material in ordinary bins or take it to appropriate collection centers.